

Assembling a Striking Movement Rod Lloyd

Identify the following parts

Count wheel and its deep slots

Cam and its slot

Warning pin

1. Set the Count Lever into the deep slot in the Count wheel



2. Set the maintenance lever in the Cam slot



3. Set the Warning pin opposite the stop lever

